


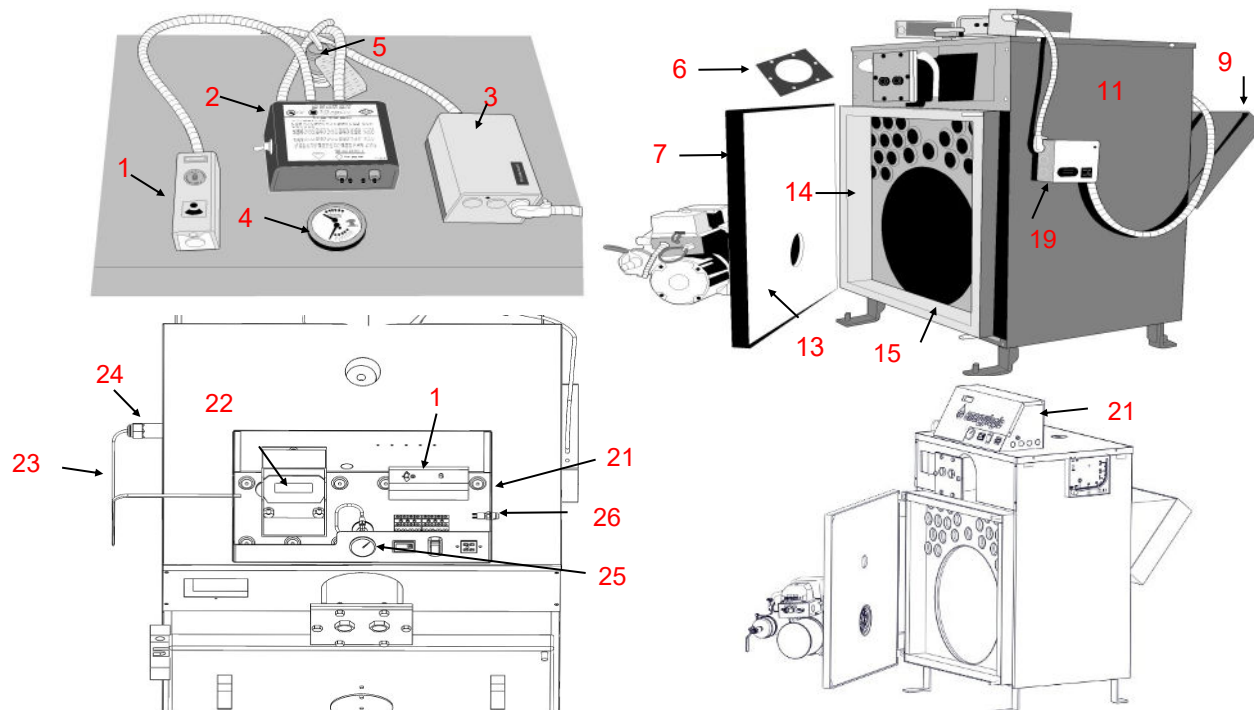

Boiler Vessel w/Controls

BOILER ASSEMBLY		* Not Pictured			Item Number	Qty			
Ref.#	Part Description	200B	375B	500B					
1	Aquastat—High Limit Temp Cut-off	x	x	x	06000134	1			
2	Control—Low Water	x	x	x	20263180	1			
3	Aquastat—Triple	x	x	x	20263179	1			
4	Gauge - Boiler Temp/Pressure (°F/°C)	x	x	x	20270302	1			
5	Valve - Pressure Relief, 30 PSI	x	x	x	20663146	1			
6	Gasket - Boiler Coil	x	x	x	20363219	1			
7	Door w/ Insulation	x	x	x	20363228	1			
9	Gasket Rope - Breech 1/2"	x	x	x	05000055	1			
10	Coil Plate	x	x	x	20363218	1			
12	*Grease - Heat Conductive	x	x	x	20260190	1			
13	Insulation - Door 26 1/2" x 26 3/4"	x	x	x	20963132	1			
14	Insulation-Left/Right-24 1/8" x 4" x 1 1/4"***			x	20963142	1			
14	Insulation - Left/Right - 24 1/8" x 3" x 1 1/4"	x	x		20963130	1			
15	Insulation - Top/Bottom - 26 1/4" x 3" x 1"***	x	x		20963131	1			
15	Insulation-Top/Bottom-26 1/4" x 4" x 1"***			x	20963143	1			
17	*High Temp Adhesive	x	x	x	30990103	1			
18	*Boiler Burner Plug Assembly	x	x	x	14010139	1			
19	Wiring Box Assembly	x	x	x	14030179	1			
20	*Baffle, Plate		x	x	06000290	1			
21	Boiler Control Box Assembly	x	x	x	04000312	1			
22	Control, Aquasmart	x	x	x	06000818	1			
23	Sensor, Aquasmart	x	x	x	06000819	1			
24	Thermowell, Aquasmart	x	x	x	06000864	1			
25	Gauge - Pressure, Aquasmart	x	x	x	06000835	1			
26	Fuse—Fast Acting, 20A, 250V	x	x	x	06000837	1			
	Switch & Fuse Holder Harness *	x	x	x	76000423	1			
	Switch, Rocker, 20A*	x	x	x	06000836	1			

** Please note that door insulation is sold individually. Part numbers 20963142, 20963130, 20963131. and 20963143 are sold as quantity 1. If you are replacing both left and right or top and bottom, please make sure to order quantity 2 per boiler door.

Part Description	Current Models							Item Number				
	140H	200H	340H	350H	200B	375B	500B		Qty			
Bracket - Furnace Wall Mount (pair)	x	x	x	x				05000087	1			



The furnace wall brackets provide a support structure for mounting the furnace to a wall.

Part Description	Current Models							Item Number				
	140H	200H	340H	350H	200B	375B	500B		Qty			
Louver - Standard	x	x		x				20331138	1			



A Standard Louver can be added to the furnace to allow air dispersion from both sides when the furnace is ceiling mounted.

Part Description	Current Models							Item Number				
	140H	200H	340H	350H	200B	375B	500B		Qty			
Louver - Multi-Direct	x	x		x				20331142	1			



A Multi-Directional Louver allows the operator to direct and spread the heated air to a more beneficial location.
Note: must be used in conjunction with standard louvers.